



WASHING SET

CE



How to properly use the Washing Set

You can perform the washing operation by using the Aura Washing Set with the Aura Roboclean appliance. This manual will familiarize you with the washing set accessories and allow you to perform your washing operations without difficulty.

We recommend that you read this manual carefully before starting the washing operation in order to know the washing set functions better and if possible, perform the first washing operation with our demonstrator.

We recommend that you use the specially formulated Aura carpet shampoo to obtain the best performance and results and to prevent damage to the Washing Set.

WASHING SET ACCESSORIES



1



2



3



4



5



6



7



8



9



10



11



12



13



14



15

- 1 Washing Hose Assembly
- 2 Trigger
- 3 Trigger Control Panel
- 4 Trigger Control Valve
- 5 Telescopic Tube Adaptor
- 6 Hose Inlet Adaptor
- 7 Transparent Hose Assembly
- 8 Male Connecting Head
- 9 Body Check Valve
- 10 Carpet Washing Nozzle
- 11 Hard Surface Washing Adaptor
- 12 Seat & Sofa Washing Nozzle
- 13 Hose Retaining Clamps
- 14 Reservoir Water Suction Hose Assembly
- 15 Carpet Washing Shampoo

Installation and operation of the Washing Set



- 1 To put water into the washing basin, open the locking latches and put the main body aside, and remove the dirty water basin.



- 2 Fill the clean water basin with water up to the water level mark (about 3.6 L / 1 gallon).



- 3 Add the carpet washing shampoo -with the amount indicated on the bottle - to the water.



- 4 Fit the water suction filter assembly through the hole on the dirty water basin, and then press and rotate right.



- 5 Place the empty dirty water basin on the auxiliary water basin and close the latches on the body.





6 Fit the carpet washing nozzle to the telescopic tube until the locking pin is locked in place.



7 Place the toothed end of the transparent washing hose to the water spraying end of the carpet washing nozzle and then lock it by turning it 90 degrees to the left or right.



8 Fit the other end of the transparent hose into the check valve under the trigger by pushing it in. Ensure that it is locked in place.

When you want to take the hose out of the check valve, you can release the hose by pressing the gray button under the check valve.



9 Make sure that the remote control is placed securely in its slot on the trigger.



10 Fix the transparent washing hose to the telescopic tube.



11 Secure the washing hose to the body so that the water inlet end and the check valve on the body meet.





12 In order to use the washing function, plug in the appliance and bring the appliance to the standby position after all connections have been performed.

13 You can start the suction motor by touching the On/Off symbol [⏻] on the body control panel or the On/Off button on the trigger control panel.

14 You can adjust the suction power by using the slider on the body control panel or the (+) / (-) buttons on the trigger control panel

15 Place the washing nozzle to the surface to be washed. Operate the pump by pressing the [💧] washing button on the Trigger control panel which will then spray the cleaning water.


 
16 To vacuum up the water, put pressure on the washing nozzle and pull it towards yourself.

17 Frequently pulling and pushing the washing nozzle causes the dirt to soften up more. Start the washing operation from the dirtiest place of your carpet or armchairs, and then clean the entire surface.

You can only operate the washing function through the trigger control panel.

The [💧] Washing symbol on the body control panel only indicates that the pump is running.



- 18 Rinse the places that have been wetted -with washing water - with shampoo- free water.
- 19 Stop the water pump by pressing the [] Washing button on the Trigger control panel. In order to have the surface dry faster, vacuum one last time with the washing nozzle without spraying any water.
- 20 Drain the dirty water inside the dirty water basin every time you fill the clean water basin. The capacity of the dirty water basin is up to level bar; as more water will cause noise and vibration in your appliance. If this happens, immediately turn off your appliance and drain the water from the dirty water basin.
- 21 When the carpet you have washed is completely dry, you may smoothen the carpet surface by vacuuming over the surface with the Power Nozzle.
- 22 When you are done cleaning, clean the water basins and the tubes well before storing the appliance. Rinse all of the washing accessories with water except for the trigger assembly.
- 23 To dry the tubes and the hose, remove the rear panel cover and plug the hose into the air outlet. Then, run the appliance for 5 to 10 minutes.
- 24 When you are done, turn off the appliance by touching the [] On/Off symbol on the body control panel or the On/Off button on the trigger control panel.

Please perform the following operations if you see that the pump does not supply water during the washing operation:

- Check again whether the washing set is installed as described in the booklet.
- Remove the filter inside the dirty water basin and check whether it is blocked. Clean it if it is blocked.
- Take your appliance to the nearest service provider if the problem persists.

! CAUTION

After each operation, do not forget to put clean water inside the clean water basin and run your appliance for 5 to 10 minutes and rinse the washing unit.





648225ZEN TDF509